HAND OF DOOR IS DETERMINED FROM OUTSIDE OF OPENING

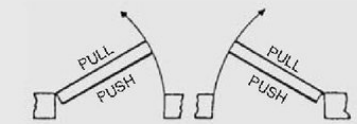

LEFT HAND "LH" — RIGHT HAND "RH"

OUTSIDE (KEY SIDE)



LEFT HAND REVERSE BEVEL "LHRB" — RIGHT HAND REVERSE BEVEL "RHRB"

OUTSIDE (KEY SIDE)

NO. 1 THRU BOLT MOUNTING FOR WOOD OR METAL DOORS 1¾" STANDARD.

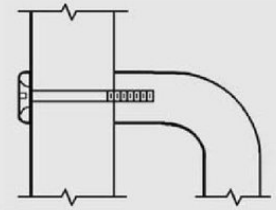

NO. 3-2 SINGLE CONCEALED MOUNTING FOR METAL DOORS REINFORCING HIGHLY RECOMMENDED

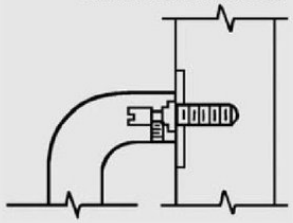

NO. 2 MACHINE SCREW WITH SEX NUTS FOR 1¾ DOORS STANDARD

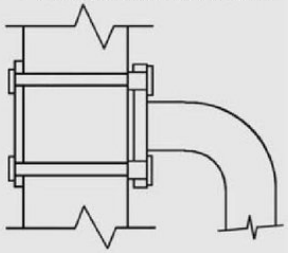

NO. 3-3 SINGLE CONCEALED MOUNTING FOR WOOD DOORS C/W STEEL INSERT

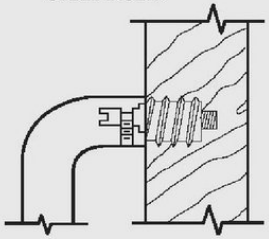

NO. 3 BACK TO BACK MTG FOR WOOD OR METAL DOORS 1¾" STANDARD

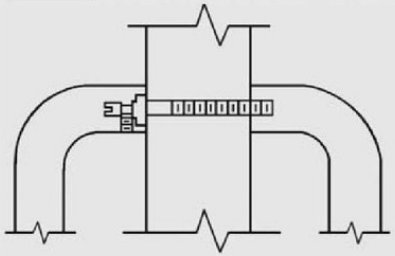

NO. 4 SURFACE MOUNTING

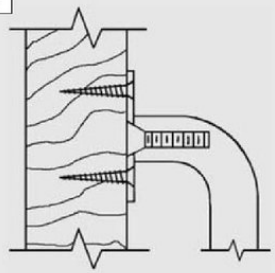

NO. 3-1 BACK TO BACK MTG FOR GLASS DOORS C/W ⅛ x 1¼ WASHERS AND VINYL PADS FOR ⅜" -½" GLASS STANDARD

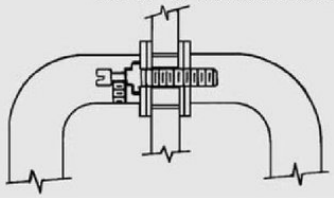

NO. 5 DOVETAIL CONCEALED MOUNTING

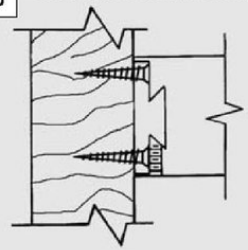

NO. 6 END CAP MOUNTING FOR WOOD OR METAL DOORS 1¾" STD.

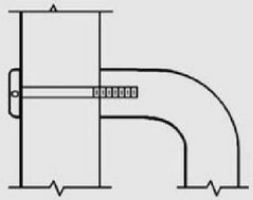

NO. 6-1 1¼" DIA. END CAP MOUNTING FOR ½" GLASS STANDARD C/W ⅛" x 1¼"– WASHERS

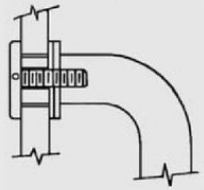

NO. 11 #6 X ⅝ SOCKET WOOD SCREW



NO. 12
NO. 12-1
¼–20 ACORN NUT
⅝–18 ACORN NUT



NO. 13
NO. 13-1
¼–20 x 2¼ MACHINE SCREW
⅝–18 x 2½ MACHINE SCREW



NO. 14 6–32 x ⅜ SOCKET MACHINE SCREW



NO. 15 ¼–20 OPEN SEX NUT



NO. 16 ¼–20 CLOSED SEX NUT



NO. 17 SLEEVE ⅝" FOR BACK TO BACK MTG.

